


unión EDRN 30 mm  $\rightarrow$  105 mm 100 mm  $\rightarrow$  600 mm

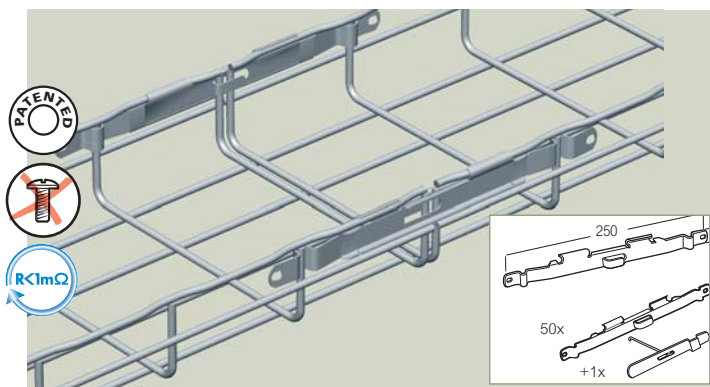

## instalación rápida sin tornillos

unión EDRN



### ■ EDRN

Se instala con la ayuda de la Llave CLEDR.

$\rightarrow$ mm	A =		B =		200		300	
	50	100/150	A	B	A	B	A	B
CF30	2	0	2	0	2	0	2	0
CFG50			2	0	2	0		
CF54	2	0	2	0	2	0	2	1
CF105/HDF105			2	0	2	0	2	1

Emb. Ref. **EDRN**

Emb.	Ref.		
50	CM558241	CM558247	-

Se instala con la ayuda de la llave CLEDR.

5 **Llave CLEDR**

$\rightarrow$ mm	A =		B =		600	
	400	500	A	B	A	B
CF30	2	1	2	2	2	2
CFG50						
CF54	2	1	2	2	2	2
CF105/HDF105	2	1	2	2	2	2

